

ULM-Dongle


Step by Step Guide for Software Installation and Dongle Update

1. Preparation (Do not connect the dongle yet)


1. Ensure that the dongle is not connected to the PC.
2. Install the following software components:
 - CBUSetup
 - Cloud Security Client
3. Then install the required configuration software, for example:
 - ASDConfig
 - ADWConfig
 - **Other Securiton configuration software.**
4. Restart the PC after all installations are completed.

2. Connect and verify the dongle

1. Connect the dongle to the PC.
2. Wait a few minutes until Windows fully recognizes the dongle.
3. Ensure that the Cloud Security Client application is running.

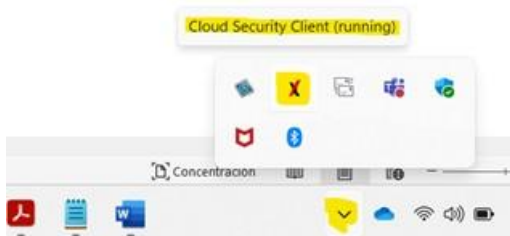

4. Open the configuration software (click on 'Offline mode') and make sure that the dongle is recognized.

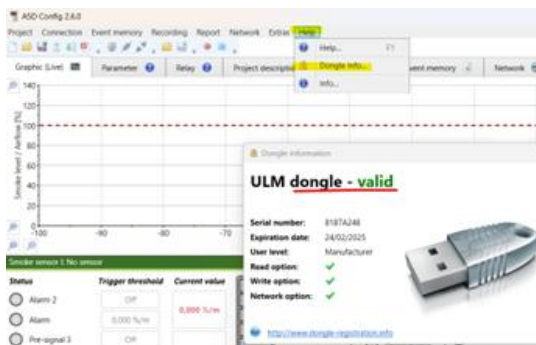


3. Update the dongle (if required)

A dongle update is required if:


- the dongle is new
- the dongle has expired
- new licenses have been added

Procedure:

1. Connect the dongle to the PC.
2. Ensure that the Cloud Security Client application is running.

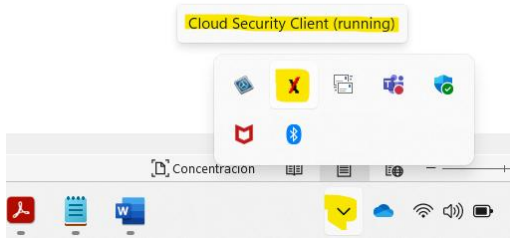


3. Open the following link in your browser: [Licence Download Manager](#)
4. The dongle number is displayed in the selection window. If the dongle is not shown, click Refresh.
5. Click Verify.

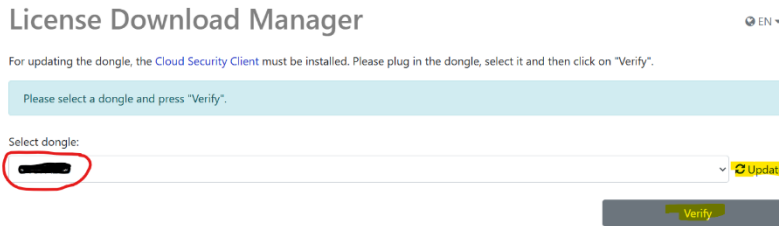


6. In the next window, open the Contact details section.
7. Enter your company email address and click Save.

Note: Private email addresses such as gmail.com or hotmail.com are not permitted. This step is only required during the initial dongle registration.

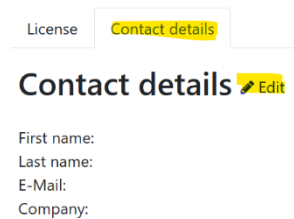

8. Click Update.

Licence Download Manager

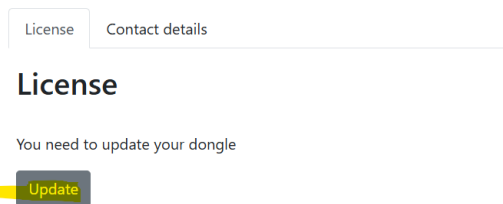

9. The next window displays the available licenses and the new expiration date.

License Download Manager

License Contact details

License

Update

Expiration date: 2025-02-24

4. Completion

The dongle is now updated and ready for use.